The Prestwick Companies

CONCRETE ANCHOR KIT

Before assembly takes place, be sure that all necessary tools & hardware have been collected and identified.

(1) L mounting bracket
(2) Concrete Wedge Anchors
(2) 1/2" Flat Head Screws
(2) ¼" Nuts
(2) ¼" Washers

7/16" socket or wrench
Hammer drill with ¼" masonry bit
Vacuum
Hammer
Phillips Screw Driver

INSTRUCTIONS

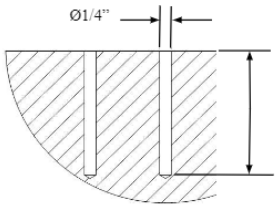

1. Remove all materials from packing and check that all the material listed above are included.

2. Locate and lay out all materials.

3. Locate and mark mounting the hole locations on concrete using L-bracket as a guide for hole spacing.

4. Drill Ø1/4" hole 2 ¾" deep in the concrete using a hammer drill and carbide-tipped masonry drill bit

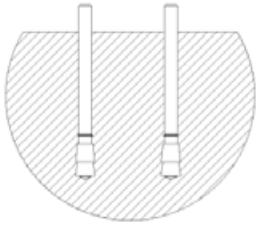

5. Clear the hole of all debris and dust using vacuum, then place wedge anchor into the hole.

6. Turn the nut onto wedge anchor until top of nut is just above top.

7. Gently tap wedge anchor into the hole using hammer until anchor is completely seated. Remove nut from end. (Figure C)

8. Repeat for additional wedge anchors

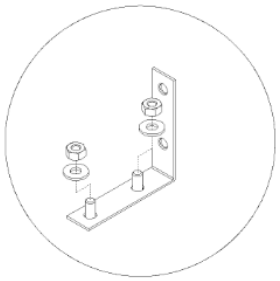

9. Place L-mounting bracket over wedge anchors. "Snug" up nuts and washers by hand.

10. Attach L-bracket to bottom of post on unit to be fastened using flat-head screws and Philips head screwdriver.

11. Ensure unit position is level.

12. Firmly tighten nuts on wedge anchors to securely anchor product.

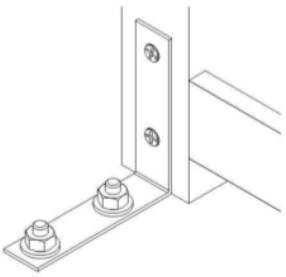

QUESTIONS ABOUT YOUR PRODUCT?
Contact our Customer Support Team: 1 (800) 505-7926
Monday-Friday, 8:00 AM - 5:00 PM CST

©2024 The Prestwick Group, Inc. All Rights Reserved.