The Prestwick Companies

DOME TETHER

Before assembly takes place, be sure that all necessary tools & hardware have been collected and identified.

(100) Tether Kits
Units Requiring Tethering
1/4" Drill Bit
Bit Driver

INSTRUCTIONS

1. Take the dome top off the unit it is currently on. Begin by drilling a 1/4" hole into the dome top along the bottom edge. While this hole can be located anywhere on the bottom edge of the dome top, it is recommended that it be located towards the back of the dome to reduce potential visibility.

2. Replace the dome on top of the unit. When placing it, take time to line up the drilled hole so that it is visible between two slats.

3. Take one (1) of the tether kits and thread one end of the provided cable through one of the slots in the tether lock.

4. Take the other end of the tether cable and thread it through the hole drilled into the dome, around the top structural ring and then into the other end of the tether lock. Tighten the cable at will.

*NOTE: Slats are hidden from the above image to clearly show the drilled hole and structural ring. Do not remove slats when threading the cable, rather thread between the slats. *

QUESTIONS ABOUT YOUR PRODUCT?
Contact our Customer Support Team: 1 (800) 505-7926
Monday-Friday, 8:00 AM - 5:00 PM CST

1.

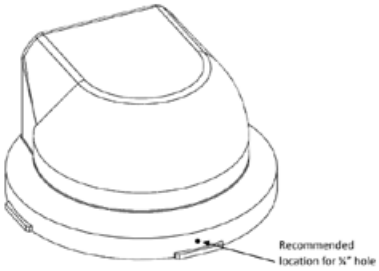

2.

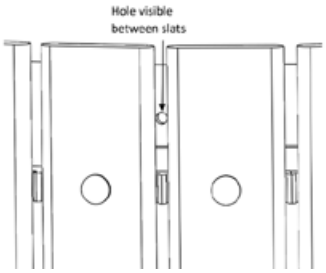

3.

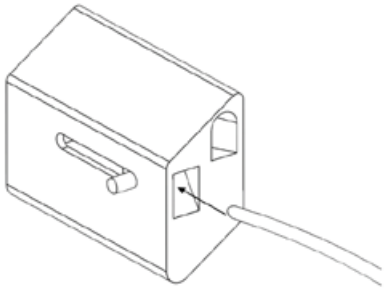

4.

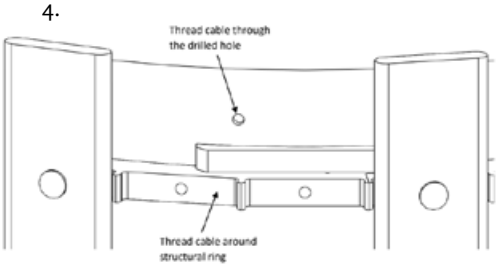

©2024 The Prestwick Group, Inc. All Rights Reserved.