The Prestwick Companies

POST INSTALLATION

Take the time to identify each of the listed pieces. If there are any missing pieces from your order, please contact us directly.

Hardware Included & Items Required
NA (X) Post(s), Sign(s), or Other Unit(s) Shovel or Post Hole
Digger, Plumb or Level

INSTRUCTIONS

1. Start by digging a hole(s) for the post(s). The hole(s) should be circular with a diameter of at least twice the width of the post. For reference, a 4"X4" post would need at least an 8" diameter hole and a 6"X6" post would need at least a 12" diameter hole. The depth of the hole should be at least 24".
   *NOTE: The maximum height of the exposed part of the post is 60" for a 4"X4" post and 66" for a 6"X6" post. *

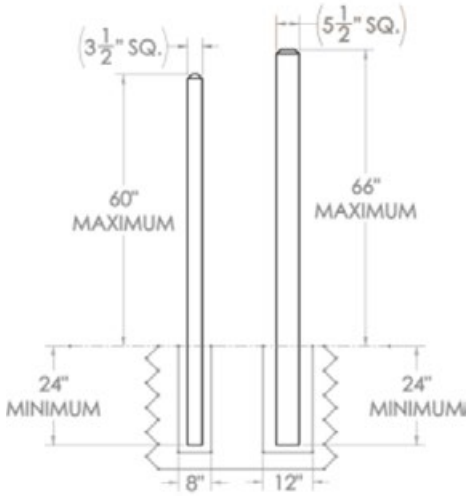

2. Secure the post with one of the two following methods:
   a. Concrete: Fill the empty hole approximately 4" from the top with concrete. Place the post squarely into the hole and let it settle. Use a level or plumb to level the post. Check the post regularly to ensure it does not shift while the concrete sets.
   b. Dirt: Place the post into the hole and use a level or plumb to ensure the post sits level. Begin refilling the hole with dirt around the post, packing the dirt frequently and checking the post frequently to ensure it remains level.
   *NOTE: While using dirt to stabilize the post has some advantages over concrete, this method may cause the post to become unstable or even warp over time. *
   c. Post Sleeve: Please follow the manufacturer's instructions regarding proper use and installment of a post using a post sleeve.

QUESTIONS ABOUT YOUR PRODUCT?
Contact our Customer Support Team: 1 (800) 505-7926
Monday-Friday, 8:00 AM - 5:00 PM CST

©2024 The Prestwick Group, Inc. All Rights Reserved.