SINGLE SIDED MESSAGE CENTER

Before assembly takes place, be sure that all necessary tools & hardware have been collected and identified.

(1) Message Center
(1) Left Mounting Post
(1) Right Mounting Post Bit Driver
(2) Post Covers Bar Clamp or C-Clamp (optional)
(2) 1 1/2" Color Matched Screws
(4) #10 X 3 1/2" Screws

#2 Philips Drive Bit
#2 Square Drive Bit

INSTRUCTIONS

1. Lay the message center on its back on a flat surface.

2. Take note of the preinstalled socket head cap screws, nuts and washers on the message center. Also take note of the slots on the sides of the mounting posts. Slide the right post onto the screw heads on the right of the message center until the bottom screw head sits in the bottom of the slot in the post. Repeat this step for the left post.

*NOTE: The slope of the top of the post should be parallel with the slope of the roof. Use this to determine which post is the left and right post. *

3. From the inside of the message center, locate the four predrilled holes (two per side). Using the provided #10 X 3 1/2" screws, fasten the screws into the posts from inside the message center.

*NOTE: Using a clamp to hold the posts in place during this step may help keep the posts aligned to the message center and potentially prevent shifting. Keep the message center on its back for this step. *

*NOTE: Wood posts will require the holes be predrilled with a 1/8" drill to prevent the wood from splitting or the screw from striping out. *

4. Once the posts are secured to the message center, place the post covers on top of the posts. Use the 1 1/2" color matching screws (one per post) to secure the post cover to the post.

*NOTE: The post cover should be centered on the post and flush against the message center. *

5. For post burial installation, see the included instructions.

QUESTIONS ABOUT YOUR PRODUCT?
Contact our Customer Support Team: 1 (800) 505-7926
Monday-Friday, 8:00 AM - 5:00 PM CST

1.

2.

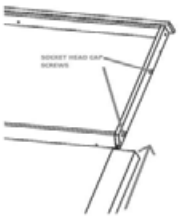

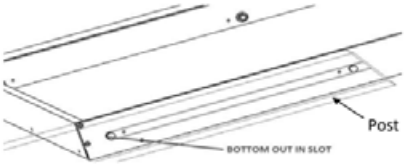

3.

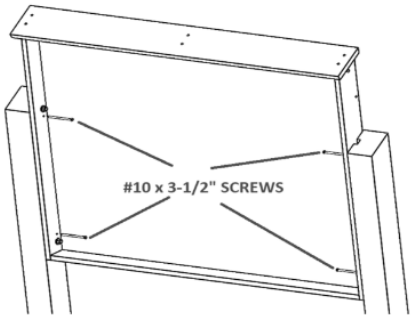

4.

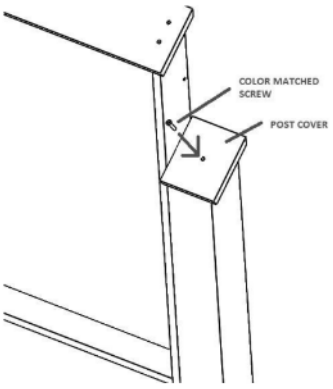

©2024 The Prestwick Group, Inc. All Rights Reserved.